zilenzio

Assembly instruction

Dezibel Ceiling and Cloudz

1. Mount all the Wire locks to the absorbent, 4 pcs / absorbent.
Installation is easy, just screw the wire locks in the prepared holes.

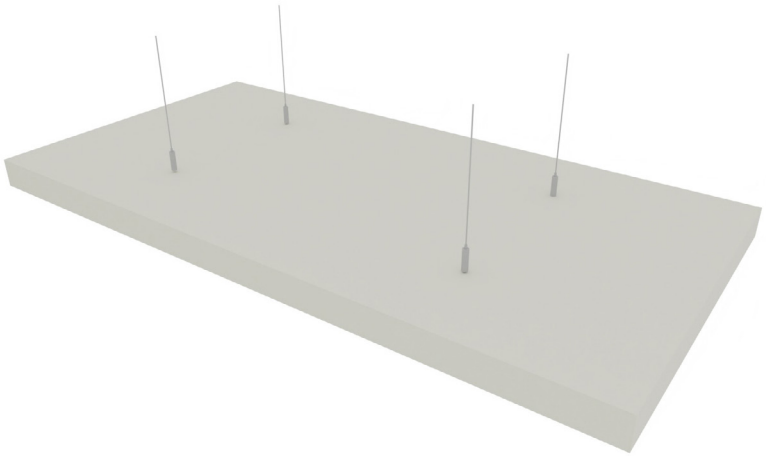

2. Then put the included wire thrue the wire lock. Hang it up in correct placeing before cutting the wires.

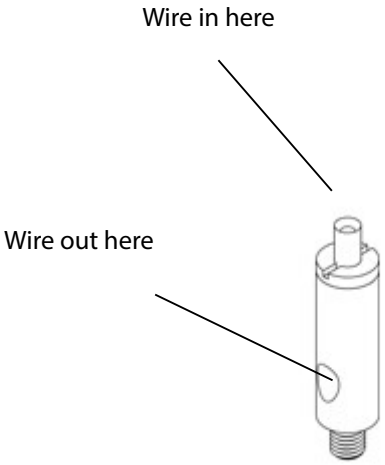

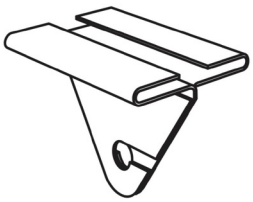

Tip !
When using suspended ceiling bracket, slide 2 psc together with the slit, before mounting at the right list in roof.
Thread through the wire in the hole in the bracket and through the loop on the wire before add it to the wirelock in the absorbent.

Phone: +46 19 672 17 00
Mail: info@zilenzio.se

www.zilenzio.com